


## 2.4GHz Wireless Audio Transmitter

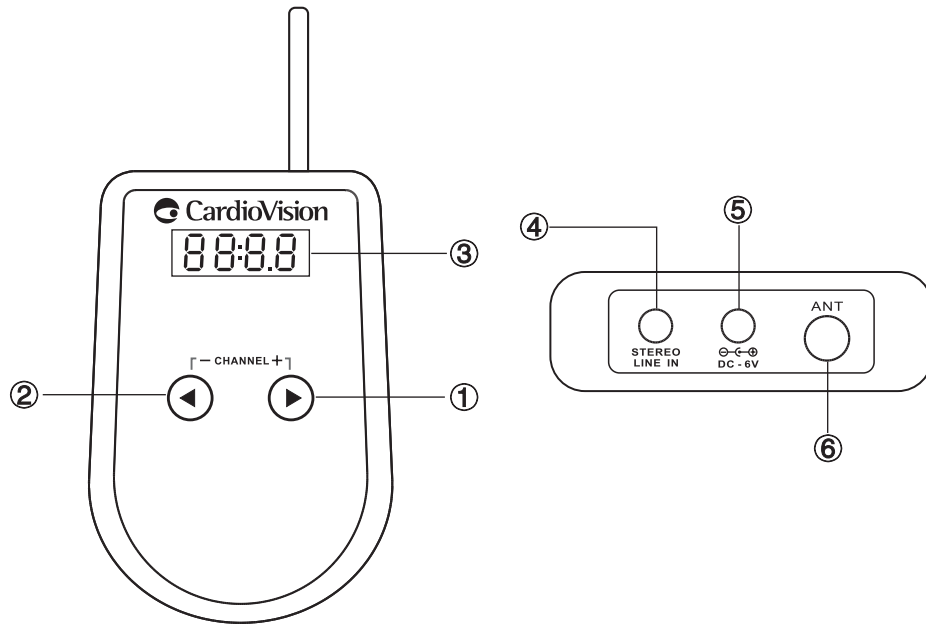

1. Channel Up
2. Channel Down
3. 14 Selectable Channels Display
4. 3.5mm Stereo Audio Input
5. DC-6V Power Input
6. Antenna Base

### CardioVision 2.4 GHz Transmitter Installation Instructions:

1. Locate a power source (AC outlet) near the TV that the transmitter is to be connected to. Plug the 6V-DC power supply into the AC outlet.
2. Connect the power cord into the “DC-6V” power input (#5 on the diagram) on the transmitter.
3. Locate the audio cord. (Red and white RCA jacks on one end and 3.5mm stereo headphone plug on the other.) Connect the RCA jacks to the “Audio Out” jacks on the TV. (Red to “R” and white to “L”) **IMPORTANT:** Make sure you connect to jacks on your TV marked “OUTPUT”, NOT “INPUT”. If you connect to the input jacks, your transmitter will not have a sound program to send to the receivers. **ALSO IMPORTANT:** Set the volume of your TV to about ½ the maximum it can go; this ensures the transmitter has a solid signal to send to the receivers. Turn the setting for the TV speakers to OFF, so you cannot hear the sound being blasted into the room. The speaker ON/OFF function is usually accessed through one of the on-screen menu’s of the TV. If you do not know how to do this, consult the user manual for your TV. DO NOT turn the volume down to zero or mute the TV as this may also turn off the sound going to the audio outputs of the TV resulting in no signal or poor signal being sent from the transmitter.
4. Connect the 3.5mm stereo plug into the input marked “STEREO LINE-IN” (#4 on the diagram) of the transmitter.
5. Screw the antenna onto the antenna base on the transmitter. Marked “ANT” (#6 on the diagram).
6. Select the channel you would like the transmitter to broadcast on. The current channel selected will be shown in the channel display window. (#3 on the diagram) CH01 through CH14 can be selected by pressing the left and right arrow buttons on the front of the transmitter. (#’s 1 and 2 on the diagram)
7. Stick the black numbers onto the “Tune to” card, and attach card to or nearby each TV to instruct members which channel to select on their receivers to hear the audio program for that particular TV.

For support or installation questions call CardioVision customer support at:  
1-866-993-0900.